

MIDI Implementationstabelle

JLCooper MCS-3400/3800

Funktion		Senden	Empfangen	Anmerkung
Basic	Default	2 – 16	2 – 16	
Channel	Changed	1 – 16	1 – 16	Memorized
Mode	Default	Mode 3	Mode 3	
	Messages	X	X	
	Altered	X	X	
Note		0 – 127	0 - 127	
Number	True Voice			
Velocity	Note On	0	0	
	Note Off			
After	Keys	X	X	
Touch	Channel	X	X	
Pitchbender		X	X	
Control	0-120	0	0	
Change				
Program		0 – 127	0 – 127	
Change	True #	0 – 127	0 – 127	
System		0	0	Zur Datensicherung
Exclusive				
System	Song Pos	X	X	
Common	Song Select	X	X	
	Tune	X	X	
System	Clock	X *	X *	
Realtime	Commands	X *	X *	
Aux	Local On/Off	X	X	CC # 122 **
Messages	All Notes Off	X	X	CC # 123 **
	Active Sense	X	X	
	Reset	X	X	CC # 121 **
Notes		* sendet und empfängt MMC und MTC ** Control Changes # 121 – 123 können gesendet und empfangen werden.		

Mode 1: OMNI ON, POLY

Mode 2: OMNI ON, POLY

Mode 3: OMNI OFF, POLY

Mode 4: OMNI OFF, MONO

o : Yes

X : No