

MIDI Implementationstabelle

JLCooper MCS-3400/3800

Funktion		Senden	Empfangen	Anmerkung
Basic Channel	Default Changed	2 – 16 1 – 16	2 – 16 1 – 16	Memorized
Mode	Default Messages Altered	Mode 3 X X	Mode 3 X X	
Note Number	True Voice	0 – 127	0 - 127	
Velocity	Note On Note Off	0	0	
After Touch	Keys Channel	X X	X X	
Pitchbender		X	X	
Control Change	0-120	0	0	
Program Change	True #	0 – 127 0 – 127	0 – 127 0 – 127	
System Exclusive		0	0	Zur Datensicherung
System Common	Song Pos Song Select Tune	X X X	X X X	
System Realtime	Clock Commands	X * X *	X * X *	
Aux Messages	Local On/Off All Notes Off Active Sense Reset	X X X X	X X X X	CC # 122 ** CC # 123 ** CC # 121 **
Notes		* sendet und empfängt MMC und MTC ** Control Changes # 121 – 123 können gesendet und empfangen werden.		

Mode 1: OMNI ON, POLY
Mode 2: OMNI ON, POLY

Mode 3: OMNI OFF, POLY
Mode 4: OMNI OFF, MONO

o : Yes
X : No